

EXPANSION MODULE AND IO CONFIGURATIONS

MAXIMUM EXPANSION (MODULES SUPPORTED)

- NPB-8000-LON (4)
- NPB-8000-232 (4)
- NPB-8000-2X-485 (2)

MAXIMUM IO (MODULES SUPPORTED)*

- T-IO-16-485 (16)*
- IO-R-16 (16)*
- IO-R-34 (8)*

*See JACE 8000 IO R data sheet for configuration details


MAXIMUM NIAGARA ENTERPRISE SECURITY (MODULES SUPPORTED)*

- T-SEC-R2R*
- T-SEC-RIO*

*16 total each or combined

MAXIMUM NIAGARA ENTERPRISE SECURITY INTRUSION KEYPADS

- SEC-INT-KP (6)

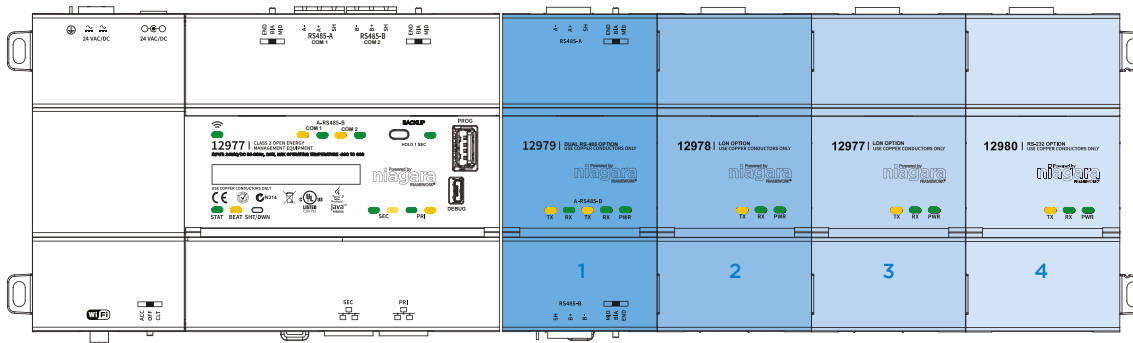

MAXIMUM COMBINATIONS

ERWEITERUNG 1	ERWEITERUNG 2	ERWEITERUNG 3	ERWEITERUNG 4
232 oder LON	232 oder LON	232 oder LON	232 oder LON
485 485	232 oder LON	232 oder LON	232 oder LON
485 485	485 485	232 oder LON	
485 485	485 485		

Expandability is dependent on the type of expansion module used

